



# MODEL HA05 SCREW-IN LAMP MODULE

For use in dry, damp or wet locations.

Thank you for purchasing Intermatic's HomeSettings devices. With the HomeSettings program you can reliably and remotely control lighting and appliances.

The outstanding features of the HomeSettings HA05 Screw-in Lamp Module includes:


- Feedback that will allow you to see whether your device has received the ON/OFF (you cannot DIM with this module) signal.
- RF signal reliability each HomeSettings product has a special feature that virtually guarantees that RF signals are received
- Ease of installation
- Manual override
- · Weather resistant housing
- · Controls compact fluorescent lights up to 42 Watts
- Compatible with other Z-wave<sup>™</sup> enabled devices



The HA05 Screw-in Lamp Module is a Z-wave<sup>™</sup> enabled device and is fully compatible with any Home Settings network and any Z-wave<sup>™</sup> enabled network. Z-wave<sup>™</sup> enabled devices displaying the Z-wave<sup>™</sup> logo can also be used with Home Settings modules and controllers regardless of the manufacturer, and Home Settings modules and controllers can also be used in other manufacturer's Z-wave<sup>™</sup> enabled networks. Each module in a Home Settings network is designed to act as a repeater. Repeaters will re-transmit the RF signal to ensure that the signal is received by its intended destination by routing the signal around obstacles and radio dead spots.

# INSTALLATION

- 1. Screw the **HA05 Screw-in Lamp Module** into a medium base lampholder that supplies 120VAC, 60Hz.
- 2. Screw a lightbulb (up to 300 Watts open-air installation) or a compact fluorescent bulb (up to 42 Watts) into the module.
- To manually turn ON the HA05 Screw-in Lamp Module, press and release the Program/ON/OFF button. The green indicator LED will turn ON, and the lightbulb screwed into the HA05 Screw-in Lamp Module will also turn ON.
- 4. To manually turn OFF the **HA05 Screw-in Lamp Module**, simply press and release the Program/ON/OFF button. The green indicator will turn OFF and the lightbulb screwed into the **HA05 Screw-in Lamp Module** will also turn OFF.

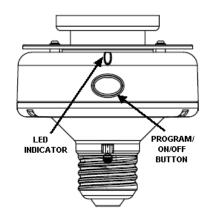

If the lightbulb does not turn ON, check to make sure that the lightbulb is seated properly, and check to make sure that your lightbulb is not broken or defective.

## PROGRAMMING

#### See the instructions for HA07 Master Remote Control or HA09 Handy Remote Control

#### FEDERAL COMMUNICATIONS COMMISSION STATEMENT

This device complies with part 15 of the FCC rules. Operation of this device is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna or device.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

#### WARNING!

Changes or modifications not expressly approved by Intermatic Inc. could void the user's authority to operate the equipment.

## **TECHNICAL INFORMATION**

For use in dry, damp or wet locations. Ratings: 300-Watts Tungsten 42-Watts Compact Fluorescent 120 VAC, 60 Hz Not recommended for enclosed fixtures with base-above-bulb mounting as shown.



Operating Temperature Range: -35°C to 60°C RF range: 50 feet minimum Made In China Enclosed fixtures with base-below-bulb mounting up to 60-Watts.



### WARRANTY INFORMATION

#### LIMITED 6-YEAR WARRANTY

If within six (6) years from the date of purchase, this product fails due to a defect in material or workmanship, Intermatic Incorporated will repair or replace it, as its sole option, free of charge. This warranty is extended to the original household purchaser only and is not transferable. This warranty does not apply to: (a) damage to units caused by accident, dropping or abuse in handling, acts of God or any negligent use; (b) units which have been subject to unauthorized repair, opened, taken apart or otherwise modified; (c) units not used in accordance with instructions; (d) damages exceeding the cost of the product; (e) sealed lamps and/or lamp bulbs, LED's and batteries; (f) the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear; (g) transit damage, initial installation costs, removal costs, or reinstallation costs.

INTERMATIC INCORPORATED WILL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY MODIFIED TO EXIST ONLY AS CONTAINED IN THIE LIMITED WARRANTY, AND SHALL BE OF THE SAME DURATION AS THE WARRANTY PERIOD STATED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATIONS OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty service is available by either (a) returning the product to the dealer from whom the unit was purchased, or (b) mailing the product, along with proof of purchase, postage prepaid to the authorized service center listed below. This warranty is made by: Intermatic Incorporated/After Sales Service/7777 Winn Rd., Spring Grove, Illinois 60081-9698/815-675-7000 http://www.intermatic.com Please be sure to wrap the product securely to avoid shipping damages.